


<https://forum.pine64.org/showthread.php?tid=12805>

Disassembling PineBook Pro Docking Deck (due to disappeared microSD Card)

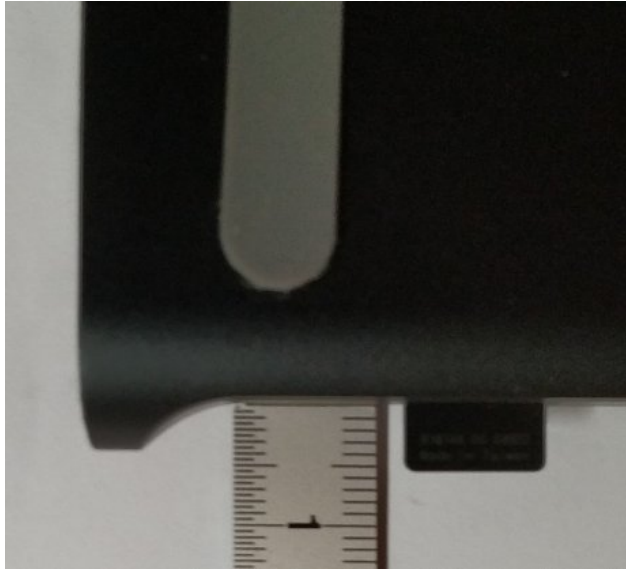

Please remark:

The microSD Card fully inserted protrudes approx. 5mm from the housing.

The golden contacts of the microSD Card are on top (same side as the grey rubber strips)



○ M3

○ Hidden original screws

To break open the housing, I drilled two M3 threads and then "gently" tore them open with inserted screws on a vice. After opening, 2 small screws were visible, which were hidden under the black cover.
=> Remove the black cover (just under 1mm thick) and loosen the screws to open the housing.

How it looks on the side of the cable is not known to me.

2021-Jan gritibaenz